

RS48-11 TRU-TURF EQUIPMENT NOV '04

Number	SPARE PARTS LIST	Use
R5000	Body; Main; RS48, RS48-11& GR48	
R5002	Frame; Seat Mount	
R5003	Plate; Seat Base	
R5004	Pin; Seat Base	
R5005	Bracket; Arm Rest Support	
R5006L	Rest; Arm; LH	
R5006R	Rest; Arm; RH	
R5007	Seat; Pan; P2 incl 3 Cleats	
R5008	Joystick	
R5009	Grip; Hand; Joystick	
R5010	Bearing; 6304	
R5011	Pedal; Foot	
R5012	Pad; Rubber; Foot Pedal	
R5013	Lever; Spiker Handle	
R5014	Grip; Lever; Spiker and/or Brake Handle; 12mm x 90mm	
R5016	Rubber part; Catch; Cover; Transmission & Seat	
R5018L	Arm; Trailer; LH	
R5018R	Arm; Trailer; RH	
R5019	Drawbar; Pin Type	
R5020	Ball Coupling; 50mm; Optional	
R5020A	Drawbar; Optional; To suit R5020	
R5025	Plug Kit; Plastic; 4 @ 35x35 + 2 @ 30x30	
R5027	Tyre & Wheel Complete	
R5028	Bearing; 6205;25 ID 52 OD To Suit R5027 Wheel & R6042 Smoothing Tube	
R5031	Coupling;Rubber	
R5033	Fan	
R5037	Sprocket Assy; Simplex; 12Tooth; Inc. R5050 Bearing;R5188 Sprocket; R5180 & R5183 Circlips	
R5039A	Bush, Taper Lock; 30mm;2012;for R5141 Sprocket 27 Tooth	
R5046	Rod Unit; Arm;Foot Pedal-Yoke;Transmission inc.1 x R5184 Rod; 2 x R5118 Rod Ends; 2 x 3/8" Nut	
R5049	Spring; Steering Return & Catch	
R5050	Bearing; 6000	
R5054	Arm; Spiker Engaging	
R5055	Bearing; 6201; Arm;Spiker Engaging	
R5056	Frame; "H"; Spiker	
R5057	Arm; Bearing Carrier; Spiker Frame	
R5058	Bearing; B4	
R5059	Spring; Return; Spiker Frame	
R5060	Housing; P204; For B4 Bearing	
R5061	Strap; Mud Flap	
R5062	Shaft; Hexagon; Spiker; With Stop Collars	
R5064	Spacer; Set; Spiker Shaft; 8 x 63mm + 1x78mm	
R5065	Spring; Spiker Spacer; Fits On Hex Shaft	
R5066	Roller; Drive; suits RS48;RS48-11;RS48-11B	
R5067	Housing; F205; LF205 4 Hole; For R5070 B5 Bearing	
R5068	Housing; LFL5J; F205;2 Hole; For R5070 B5 Bearing	
R5069	Bearing; 6006; Fits R5057 Bearing Carrier Arm	
R5070	Bearing; B5;25MM	
R5071	Mudflap 150mm X 160mm	
R5072	Arm; Steering; Attaches to Joystick	
R5073	Rod Unit; Steering Arm to Smoothing Head; Incl. 2 x R5118 Rod Ends; 1x R5185 Rod; 2 x 3/8" Nuts	
R5074	Bracket; Swivel; Smoothing Head; Incl. Plastic Plugs 40x40	
R5075	Bush; Nylon; Black; 27x16.9x32mm	
R5077	Housing; LFL6J; LF206 For R5078 B6 Bearings	
R5078	Bearing; B6;30MM	
R5079F	Head; Smoothing; Front; Frame Only	
R5079R	Head; Smoothing; Rear; Frame Only	
R5080	Spacer; For R5081 Carrier	

R5081	Carrier Mount; Bearing; Smoothing Head	
R5082	Tube; Smoothing; 570mm x 60mm OD	
R5084	Rod Unit; 560mm; Connecting Smoothing Heads; Incl. 1 R5194 Rod; 2 x R5118 Rod Ends & R5187 Tube & 2 x 3/8"NF ZP Hex Nuts	
R5085-1	Shim; 1mm Thick; Honda Engine	
R5085-2	Shim; 2mm Thick; Honda Engine	
R5085-3	Shim; 3mm Thick; Honda Engine	
R5087	Key; Woodruff; 8mm x 30mm	
R5088	Mat; Foot 300 x 180 x 3 Ribbed; Adhesive	
R5089	Key; Woodruff; 3/16"; For Joystick prior to "B" Series & in Eaton 11 Trans Coupling	
R5091	Engine; 5.5 HP; Honda; GX160 LX2; LX4; LXU	
R5092	Bush; Nylon; Red; Smoothing Head; Swivel	
R5093	Spring; Coil; Drawbar	
R5094	Spring; Arm; Chain Tensioner; 90mm x 13mm x 1.5mm	
R5095	Washer; Capped; Starlock; 16mm	
R5096	Arm; Foot Pedal; For Eaton 7 & 11 Transmission	
R5099	Bush; Bronze; For Chain Tensioner Arms	
R5100	Mount; Swivel; Smoothing Head - For Pivot Shaft; Supply R5104 Pivot Shaft	
R5102	Catch; Front Trailer; No Spring Tab; Use R5093 Spring	
R5103	Washer; 20 x 42 x 3mm; Fits Smoothing Roller Shafts R5106 & G4075	
R5104	Shaft; Pivot; To Suit R5092 Bush; Red; Nylon; In R5074 Bracket	
R5106	Shaft; Stepped; Smoothing Roller	
R5108	Ball Fitting; Small Flange; Strut; Foot Pedal; 10mm Dia. M8 Thread	
R5109	Retainer; Clip; For R5115 Strut Cup End 13mm	
R5111	Retainer; Clip; For R5114 Strut Cup End 10mm	
R5112	Circlip; External; 25mm	
R5113	Washer; Flat; 24x44x2mm; Suits only R5028 Bearing	
R5114	Cup End; Standard; Strut; 10mm Dia. Ball; Foot Pedal	
R5118	Rod End; 3/8" UNF; For Threaded Rod (part Rod Units R5084; R5046; R5073)	
R5119	Light; 3" x 5"; 50 Watt	
R5120	Coil; Lighting; ZE1 711; For Honda 4HP & 5.5 HP	
R5121	Flywheel; Honda 5.5 HP; ZE1 811	
R5122	Bolt; Flange; 6 x 28; Coil; 883 000	
R5123	Switch; Light	
R5124	Harness; Wire; Incl. Tube	
R5125	Bracket; Lights; For Light Kit	
R5126	Bracket; Switch; For Light Kit	
R5127	Light Kit; Optional	
R5128	Bracket; Hour/Tach Meter	
R5129	Meter; Hour/Tach	
R5130	Cover; Transmission; RS48-11; GR11000	
R5131	Bracket; Transmission; Eaton 11	
R5132	Arm; Chain Tensioner; One Only	
R5133	Transmission; Eaton 11	
R5136	Sprocket 11T 08B2 17mm 1/2BS FHT Duplex	
R5137	Chain; Assembly; Incl R5138 Joiner; Duplex; Eaton 11 Transmission	
R5138	Joiner; Chain; Duplex Eaton 11 Transmission	
R5139	Coupling; Transmission; Eaton 11 Honda 5.5 hp or Kohler 6 hp	
R5140	Coupling; Short; Engine; Honda 5.5 hp or Kohler 6 hp to Eaton 11 Transmission	
R5141	Sprocket; 27 Tooth; Duplex; With R5039A 2012 Taper Lock Bush; Drive Roller; Eaton 11 Transmission	
R5142	Cushion; Rubber; For Engine Base Plate	
R5143	Tank; Stainless Steel; Transmission Oil; 5.2 Litre; Incl R5145 Drain Plug	
R5144	Breather; Tank; Transmission Oil	
R5145	Plug; Drain; Tank; Transmission Oil	
R5146	Housing; Filter; Tank; Transmission Oil	
R5147	Cartridge; Filter; Tank; Transmission Oil	
R5148	Gauge; Sight; Tank; Transmission Oil	
R5149	Plate; Mounting; Engine	
R5150	Pipe; Oil; Kit; 4 Pipes And Fittings; R5151, R5152, R5153, R5154	
R5151	Pipe; Oil; A	
R5152	Pipe; Oil; B	

R5153	Pipe; Oil; C	
R5154	Pipe; Oil; D	
R5155	Bush; Taper Lock; 30mm; Use R5039A	R5039A
R5156	Key; Woodruff; 1/8" x 5/8"; Fits R5171 Yoke;R5136 Sprocket; R6009 Shaft; Steering	
R5157F	Mesh, Body, Front; RS48 & RS48-11	
R5157R	Mesh; Body; Rear; RS48 & RS48-11	
R5158	Rubber Strip; Frame; Seat	
R5159	Rubber Strip; Rest; Trailer	
R5161	Bearing; 6200	
R5162	Engine; Kohler; 6 HP	
R5163	Sticker; Safety Pack; RS48-11	
R5164	Woodruff Key 4 x 6.5mm	
R5165	Scraper; Wire; 600mm; Set of 6	
R5167	End; Bolt Type; Strut; Trailer; M8 Thread; Incl. M10 x 40 Bolt & M10 Nut	
R5168	Spacer; Stainless Steel; Strut End; Transmission	
R5169	Cup End; Long; 13mm Dia.; For R5173 Transmission Strut	
R5170	Bolt; Adjuster; M8 x 1/2" HEX x 40mm Incl. M8 Nut; For R5173 Transmission Strut	
R5171	Yoke; Eaton 11 Transmission; Suits Rear Struts	
R5173	Kit; Strut; Spec301002Q0; Connects To R5171 Yoke or R5172 Yoke; Incl. 3 x M8 Nuts; 1 x 5/16" Spring Washer; 1 x R5108 Ball Fitting; 1 x R5111 Clip; 1 x R5114 Cup End; 1 x R5170 Adjuster Bolt; 1 x R5109 Clip; 1 x R5168 Spacer; 1 x R5169 Cup End; 2 x 5/16"	
R5174	Arm; Brake Pedal	
R5175	Spring; Brake Pedal	
R5176	Plate; Foot; Brake Pedal	
R5177	Pipe; Oil; Kit; 4 Pipes R5152, R5153, R5154, R5178	
R5178	Pipe; Oil; A; Used With R5173 Strut	
R5179	Ball Fitting; Large Flange; 13mm; M8 Thread	
R5180	Circlip; External; 10mm	
R5182	Circlip External 1/2" 12.5mm	
R5183	Circlip Internal 1.0" 25.4mm	
R5184	Rod; 3/8" x 70mm; Connects Foot Pedal Arm To Transmission Yoke	
R5185	Rod; 3/8" x 270mm; Connects Steering Arm To Smoothing Head; RS48/RS48-11	
R5187	Tube; 12.7mm x 495mm; For R5084 Rod	
R5188	Sprocket Only; 12Tooth; Supply R5037 Sprocket Kit	R5037
R5189	Spiker Blade; 8 Point	
R5193	Kit; Progressive Transmission & Foot Pedal Self-Centring; RS48-11; Incl. 1 x R5171 Yoke; 2 x R5173 Strut Kits	
R5194	Rod; 3/8" x 570mm; Connects Right & Left Smoothing Heads; Part R5084	
R5195	Key; 32.5mm x 5mm x 5mm; Honda/Kohler Engines	
R5196	Pin; Safety; and chain	R6017
R5197	Rubber Strip; Oil Tank Base; 50x25x3 Neoprene	
R5199	Strut; Trailer; Spec 130503. Use R5210	
R5200	Plate; Footrest; 587.5mm x 295mm	
R5201	Bracket; Gussett; Retro; Strut Support Upper	
R5202	Strut; Spec 031103; 32mm dia. Bare; Supply R5210	
R5203	End; Bolt Type; Strut; Trailer; M10 Thread; Incl. M10 x 40 Bolt & M10 Nut	
R5204	Bolt & Nut; M10x40; M10 Hex Nut	
R5205	Kit; Smoothing Roller; RS48 & RS48-11; Incl. 1 x R5082 Tube; 2 x R5010 Bearings; 2 x R5103 Washers; 1 x R5106 Stepped Shaft; 1 x R5208 3/8" x 1" Hex Bolt; 1 x R51209 3/8" Spring Washer; 1 x R5211 3/8" CSK Screw	
R5208	Bolt; 3/8"x1" UNF Hex Head	
R5209	Washer; 3/8" Spring	
R5210	Strut - Trailer - Spec 031103; 32mm dia.; Comprises R5202 Strut (Bare) + 2 x R5203 Ends + 2 x M10 x 40 Bolts + 2 x M10 Nuts	
R5211	Screw; 3/8" x 1" UNF CSK	
R5212	Nut; 3/8" UNF	
R5213	Clip; Steel; Pinch Cleat; Seat	
R5214	Bush Upgrade R5106 Shaft To R5208 6205 Steel Bearings	
R5216	Joiner; Chain; Duplex; Half Link	
R6040	Sticker; Sloping Greens	
R6041	Sticker; Danger, Cover Removal	
R6045	Bush; Sprocket; Shaft Extension Eaton 11	